
 


 



 
 
 


 
 




 
 
 
 



 


 

 

 


 

 

 

 

 
 
 
 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Audio Off		Mute	
Slow Down		Ch -	
Stop		Stop	
Subt.		Subt	
Auto/Track		TV/R	
Slow Up		Ch +	
Pause		Pause	
Rep/A-B	 + 	Shift + Text	
Title		List	
Repeat/1/All		Text	
Zoom	 + 	Shift + Eject	
DVD/TV		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Return		Back	
Menu Down		Down	
Progr.		Sleep	
Volume+		Vol +	
Next		>>	
Volume-		Vol -	
Top Menu	 + 	Shift + Menu	
1		1	
Prev.		<<	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			8
9			9
+10			Guide
0			0
C/CH			Pre Ch
Record			Rec
Open/Close			Eject
Rewind			<<
F.Forward			>>
Setup			Options
Play			Play
Mode			Media
Video			D. Menu
Syst.Preset			Smart
Audio			Dual
Clear/00:00			Exit
Angle			Format

