
 


 

 
 
 



 

 



 
 


 





 






Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Pause		Pause
Auto/Track		Smart
Stop		Stop
Subt.		Subt
Title		List
Rep/A-B		TV/R
Pepeat/1/All		Text
Zoom		Shift + Eject
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Return		Back

Originalfernbedienung Ersatzfernbedienung

Menu Left		Left
OK Enter		Ok
Progr.		Sleep
Next		>>
Menu Right		Right
Prev.		<<
Menu Down		Down
Volume+		Vol +
Volume-		Vol -
Top Menu		D. Menu
1		1
2		2
3		3
4		4
5		5
Store		Red
6		6



Originalfernbedienung    Ersatzfernbedienung






 

 

 
 



Digest		Green
7		7
Open/Close		Eject
8		8
9		9
Clear/00:00		Exit
+10		Guide
Record		Rec
Auto Scan		Media
Rewind		<<
Play		Play
F.Forward		>>
Setup		Options
Audio		Dual
3D		3D
0		0
C/CH		Pre Ch

Originalfernbedienung    Ersatzfernbedienung

 

 

 


 









Angle		Format
Np	+	Shift + Subt
Info	+	Shift + Info







 
 










 
**Originalfernbedienung Ersatzfernbedienung**

On/Off		Power
Audio Off		Mute
Stop		Stop
Pause		Pause
Slow Up		Ch +
Slow Down		Ch -
Subt.		Subt
Auto/Track		Sleep
Rep/A-B		TV/R
Zoom	 + 	Shift + Eject
Title		List
Pepeat/1/All		Text
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

**Originalfernbedienung Ersatzfernbedienung**


 


 



 



 




OK Enter		Ok
Menu Right		Right
Return		Exit
Menu Down		Down
Progr.		Back
Volume+		Vol +
Top Menu		D. Menu
Next		>>I
Volume-		Vol -
1		1
2		2
3		3
Prev.		I<<
4		4
5		5
6		6
7		7



 








 
 


 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8			
Video			
9			
+10			
0			
C/CH			
Rewind			
Random			
Angle			
R/L	 +  Shift + Info		
Play			
Record			
F.Forward			
3D			
Open/Close			
Audio			



**Originalfernbedienung   Ersatzfernbedienung**

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Auto/Track		Smart
Stop		Stop
Subt.		Subt
Pause		Pause
Zoom		Shift + Eject
Title		List
Rep/A-B		TV/R
Pepeat/1/All		Text
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

**Originalfernbedienung   Ersatzfernbedienung**

OK Enter		Ok
Menu Right		Right
Return		Back
Menu Down		Down
Next		>>
Progr.		Sleep
Volume+		Vol +
Top Menu		D. Menu
Volume-		Vol -
Prev.		<<
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
8		8	
Open/Close		Eject	
Mode		Media	
9		9	
Setup		Options	
+10		Guide	
3D		3D	
0		0	
C/CH		Pre Ch	
Play/Back	 + 	Shift + Left	
Resume	 + 	Shift + Play	
Play		Play	
Karaoke/Step	 + 	Shift + Pause	
Np	 + 	Shift + Subt	
Record		Rec	
F.Forward		>>	
Rewind		<<	
Store	 + 	Shift + Down	
Angle		Format	
Lang		Dual	

