



 
































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	A-B		Yellow / YouTube / Repeat
	Clear		Exit / Cancel / Clear
	Eject		Eject / Surround
	Time		Sleep / Timer
	Resume		Shift + Pause / Step /
	Prog		TV/Radio /
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Audio		Audio / Lang I/II
	4		4
	5		5
	6		6
	Subtitle		Subtitle / EQ
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Zoom		Zoom / Size
	0/10		0
	10+		Guide / EPG / -/-
	Ran		Blue / Prime Video / Random
	OSD		Display / Media
	Return		Back / Return
	Repeat		Green / APP / Repeat
	Menu		Menu / Home
	Vol+		Vol+
	Angle		Info / Angle
	Surround		Shift + Eject / Surround
	Slow		Shift + Play /
	Vol-		Vol-
	Setup		Setup / OPT /
	Up		Up



