











 
 
 


 
 
 


 





 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	AV		AV / Input / RDS
	Eject		Eject / Surround
	TTX		Text / Goto
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	T.Rec / Mix		OK
	Display / Reveal		Display / Media
	Red / OTR		Red / Netflix / Search
	Green / T.Speed		Green / APP / Repeat
	Auto Trak+ / L/F		>>I / Preset+
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Auto Trak- / Subcode		I<< / Preset-
	Index		Info / Angle
	Left		Left
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Rec		Rec / Rec Mode
	C/Clear		Exit / Cancel / Clear
	Menu		Menu / Home
	Play		Play / Slow
	<< Rew		<< / Tune-
	P/Still / Hold		Pause / Step / Freeze
	P/Still / Hold		Shift + Stop /
	FF >>		>> / Tune+
	Stop		Stop / Hold
	Vol-		Vol-
	Vol+		Vol+
	PR/Page-		CH- / Page-
	PR/Page+		CH+ / Page+
	1		1
	2		2
	3		3
	4		4



