


 

 

 

 

 



 

 

 

 

 

 



 







 



 

 
 



 
 



 


 






 

 





Originalfernbedienung Ersatzfernbedienung






 








	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue/Picture		Blue
	O)/I/I		Dual
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	[≡]		Text
	Back		Back
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	^[+]		Format
	Play/[?]		Play
	>>/[◆]		>>








 

 

 





 



 

 






 
 

 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	~/Timer		Options
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[←■]		TV/R
	[↑■]		3D
	♪		Shift + Dual







 
 
 











 









 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	i		Info
	O/I/II		Dual
	[≡]		Text
	P+		Ch +



 


 



 






 

Originalfernbedienung Ersatzfernbedienung

	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	<<		<<
	>>/[◆]		>>
	^[+]		Format
	~/Timer		Options
	Rec/Top Menu		Rec
	Play/[?]		Play
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[←■]		TV/R








 

 

 

 

 

 

 



 

 



 



 
 
 

 
 
 

 







 













 

 

 




Originalfernbedienung Ersatzfernbedienung

	[↕ ■]		3D
	♪		Shift + Dual
	Menu		Menu
	Back		Back
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	O)/I/II		Dual
	Menu		Menu
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	<<		<<
	Play/[?]		Play
	>>/[♦]		>>
	Stop/[X]		Stop
	Pause/[≡i]		Pause





Originalfernbedienung Ersatzfernbedienung

	^[+]	PICTURE FORMAT	Format
	~ / Timer	SETTINGS OPT	Options
	[■]	AD SUBT	Subt
	[←■]	SEARCH TV/R	TV/R
	[↓■]	ECO 3D	3D
	♪	SHIFT + SOUND DUAL	Shift + Dual
	Back	RETURN BACK	Back
	[≡]	REPEAT TEXT	Text

Originalfernbedienung Ersatzfernbedienung

