


 
 
 

 


 






 



 





 





 







Originalfernbedienung Ersatzfernbedienung

	Power Audio		Power
	Display/Chara		Info
	Tv/Video		TV/R
	Level Meter		Media
	Motion Sensor		Smart
	Title/Del		Options
	Eco/Dimmer		Shift + 3D
	1/Mark		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	>10		Pre Ch
	10		Guide
	Karaoke Scoring		Shift + Smart
	Reserve		Shift + Options
	Vocal Masking		Shift + Dual
	Vocal Support		Shift + Subt
	Menu/PL		Menu
	Top Menu/PG		Shift + Menu
	On Screen		Shift + Info
	Fade Muting		Mute
	Up/PTY+		Up
	Down/PTY-		Down
	Right/TA/News/Inf		Right
	Left/PTY Search		Left
	Audio Vol+		Vol +
	Audio Vol-		Vol -
	Sleep		Sleep


 

















 

 

 
 
 
 

 

 


 




Originalfernbedienung Ersatzfernbedienung

	A.Stby		Shift + 0
	Clock/Timer		AV
	Return		Back
	Cancel		Exit
	Set Up		D. Menu
	Stop		Stop
	Play		Play
	Pause		Pause
	←/Tuner/Play		Shift + Back
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Play/Pause		Blue
	Play/Pause USB		Yellow
	Play/Pause iPod A		Red
	Play/Pause iPod B		Green


 












Originalfernbedienung Ersatzfernbedienung

	Audio/MPX		Dual
	Subtitle		Subt
	Zoom		Eject
	Tuner/Audio In		Text
	File Type		Shift + TV/R
	Repeat		Shift + Text
	VFP/Scan Mode		Format
	3D Phonic/HP Surr		3D
	C.Voice		Shift + List
	DVD/Audio In		Shift + Format
	Sound Mode		List
	My Sound		Shift + Mute
	V.Bass		Shift + 7
	Super Bass		Ch +
	Super Bass Level-		Ch -
	Mic Vol+		Shift + Right
	Mic Vol-		Shift + Left





Originalfernbedienung Ersatzfernbedienung

	Karaoke Setting	SHIFT + 9	Shift + 9
	Mic Mix	SHIFT + 8	Shift + 8
	Power Tv	SHIFT + 	Shift + Power
	Repeat A-B	SHIFT + 	Shift + Play
	Angle	SHIFT + 2	Shift + 2
	Tv Channel+	SHIFT + 	Shift + Ch +
	Tv Channel-	SHIFT + 	Shift + Ch -
	Tv Vol+	SHIFT + 	Shift + Vol +
	Tv Vol-	SHIFT + 	Shift + Vol -
	I<< Group/Title Skip	SHIFT + 	Shift + I<<
	Group/Title Skip >>I	SHIFT + 	Shift + >>I
	>> Group/Title	SHIFT + 6	Shift + 6
	Enter/Set	OK	Ok

Originalfernbedienung Ersatzfernbedienung