



Originalfernbedienung Ersatzfernbedienung

|   |        |   |                    |
|---|--------|---|--------------------|
|    | Power  |    | Power              |
|    | Mute   |    | Mute / Dimmer      |
|    | 1      |    | 1                  |
|    | 2      |    | 2                  |
|    | 3      |    | 3                  |
|    | 4      |    | 4                  |
|    | 5      |    | 5                  |
|    | 6      |    | 6                  |
|    | 7      |    | 7                  |
|    | 8      |    | 8                  |
|    | 9      |    | 9                  |
|  | Source |  | AV / Input / RDS   |
|  | 0      |  | 0                  |
|  | Info   |  | Info / Angle       |
|  | DMP    |  | D.Menu / Top       |
|  | Up     |  | Up                 |
|  | EPG    |  | Guide / EPG / -/-- |

Originalfernbedienung Ersatzfernbedienung



|   |          |   |                        |
|---|----------|---|------------------------|
|    | Left     |    | Left                   |
|    | Enter    |    | OK                     |
|    | Right    |    | Right                  |
|    | Menu     |    | Menu / Home            |
|    | Down     |    | Down                   |
|    | Exit     |    | Exit / Cancel / Clear  |
|    | Vol +    |    | Vol+                   |
|    | List     |    | Smart / List           |
|    | CH +     |    | CH+ / Page+            |
|    | Vol -    |    | Vol-                   |
|    | CH -     |    | CH- / Page-            |
|  | Fav      |  | Fav / Marker / PC      |
|  | Sleep    |  | Sleep / Timer          |
|  | Index    |  | Display / Media        |
|  | Recall   |  | Back / Return          |
|  | Red / << |  | Red / Netflix / Search |
|  | Red / << |  | << / Tune-             |







Originalfernbedienung Ersatzfernbedienung

|   |             |   |                    |
|---|-------------|---|--------------------|
|    | Power       |    | Power              |
|    | Mute        |    | Mute / Dimmer      |
|    | 1           |    | 1                  |
|    | 2           |    | 2                  |
|    | 3           |    | 3                  |
|    | 4           |    | 4                  |
|    | 5           |    | 5                  |
|    | 6           |    | 6                  |
|    | 7           |    | 7                  |
|    | 8           |    | 8                  |
|   | 9           |   | 9                  |
|  | [≡?]/Source |  | AV / Input / RDS   |
|  | 0           |  | 0                  |
|  | [≡i]/Info   |  | Info / Angle       |
|  | DMP         |  | D.Menu / Top       |
|  | Up          |  | Up                 |
|  | EPG         |  | Guide / EPG / -/-- |








 

 

 

 

 

 

 

 


 


 



Originalfernbedienung Ersatzfernbedienung

|   |       |   |                        |
|---|-------|---|------------------------|
|    | Left  |    | Left                   |
|    | Enter |    | OK                     |
|    | Right |    | Right                  |
|    | Menu  |    | Menu / Home            |
|    | Down  |    | Down                   |
|    | Exit  |    | Exit / Cancel / Clear  |
|    | Vol+  |    | Vol+                   |
|    | List  |    | Smart / List           |
|    | CH+   |    | CH+ / Page+            |
|    | Vol-  |    | Vol-                   |
|   | CH-   |   | CH- / Page-            |
|  | ♥     |  | Fav / Marker / PC      |
|  | Sleep |  | Sleep / Timer          |
|  | Index |  | Display / Media        |
|  | Back  |  | Back / Return          |
|  | Red   |  | Red / Netflix / Search |
|  | <<    |  | << / Tune-             |





Originalfernbedienung Ersatzfernbedienung

|   |               |   |                             |
|---|---------------|---|-----------------------------|
|    | Green         |    | Green / APP / Repeat        |
|    | >>            |    | >> / Tune+                  |
|    | Yellow        |    | Yellow / YouTube / Repeat   |
|    | <<            |    | << / Preset-                |
|    | Blue          |    | Blue / Prime Video / Random |
|    | >>            |    | >>  / Preset+               |
|    | Play          |    | Play / Slow                 |
|    | Pause         |    | Pause / Step / Freeze       |
|    | [≡]           |    | Text / Goto                 |
|    | Stop/Still    |    | Stop / Hold                 |
|   | [≡+]          |   | Picture / Format            |
|  | [≡o]/Subtitle |  | Subtitle / EQ               |
|  | [≡◆]/[+]      |  | Zoom / Size                 |
|  | [≡x]          |  | Setup / OPT /               |
|  | Radio         |  | TV/Radio /                  |
|  | Audio         |  | Audio / Lang I/II           |
|  | Rec           |  | Rec / Rec Mode              |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

