
 
 

 
 

 
 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡?] / Source		AV
	[≡i] / Info		Info
	DMP		Smart
	EPG		Guide
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	List		List
	CH+		Ch +
	CH-		Ch -
	FAV		Pre Ch
	Sleep		Sleep
	Index		Shift + Info
	Red / <<		Red
	Red / <<		<<
	Green / >>		Green




 

 
 
 










 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Green / >>>	>>>		
Yellow / I<<<	Yellow		
Yellow / I<<<	I<<<		
Blue / >>>I	Blue		
Blue / >>>I	>>>I		
[≡] / Play/Pause	Text		
[≡] / Play/Pause	Play		
[≡] / Play/Pause	Pause		
[≡□] / Stop/Still	Stop		
[≡⊕] / Subtitle	Subt		
[≡⇕]	3D		
[≡X]	Shift + Exit		
Recall	Back		
Radio	TV/R		
Audio / I/II	Dual		
Rec	Rec		

 







 





 
 





Originalfernbedienung Ersatzfernbedienung








 
 

 


 
 


Power		Power
Mute		Mute
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
[≡?]/Source		AV
[≡i]/Info		Info
DMP		Smart
EPG		Guide
Menu		Menu

Originalfernbedienung Ersatzfernbedienung

Exit		Exit
Up		Up
Down		Down
Right		Right
Left		Left
Enter		Ok
Vol+		Vol +
Vol-		Vol -
List		List
CH+		Ch +
CH-		Ch -
♥		Pre Ch
Sleep		Sleep
Index		Shift + Info
Back		Back
Red		Red
Green		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Yellow		Yellow	
Blue		Blue	
<<		<<	
>>		>>	
I<<		I<<	
>>I		>>I	
Play		Play	
Pause		Pause	
Stop/Still		Stop	
[≡+]		Format	
[≡]		Text	
[≡o]/Subtitle		Subt	
[≡◆]/[+]		3D	
[≡x]		Options	
Radio		TV/R	
Audio		Dual	
Rec		Rec	

