




 

 





 
























 



 







 




**Originalfernbedienung    Ersatzfernbedienung**

|   |       |   |                    |
|---|-------|---|--------------------|
|    | Power |    | Power              |
|    | Mute  |    | Mute / Dimmer      |
|    | 1     |    | 1                  |
|    | 2     |    | 2                  |
|    | 3     |    | 3                  |
|    | 4     |    | 4                  |
|    | 5     |    | 5                  |
|    | 6     |    | 6                  |
|    | 7     |    | 7                  |
|    | 8     |    | 8                  |
|   | 9     |   | 9                  |
|  | 0     |  | 0                  |
|  | EPG   |  | Guide / EPG / -/-- |
|  | Rec   |  | Rec / Rec Mode     |
|  | Info  |  | Info / Angle       |
|  | Vol+  |  | Vol+               |
|  | Vol-  |  | Vol-               |

 











 

 
 








**Originalfernbedienung    Ersatzfernbedienung**

|   |              |   |                             |
|---|--------------|---|-----------------------------|
|    | CH+          |    | CH+ / Page+                 |
|    | CH-          |    | CH- / Page-                 |
|    | ≡            |    | D.Menu / Top                |
|    | Input        |    | AV / Input / RDS            |
|    | Smart Colors |    | Display / Media             |
|    | Up           |    | Up                          |
|    | Down         |    | Down                        |
|    | Right        |    | Right                       |
|    | Left         |    | Left                        |
|    | OK           |    | OK                          |
|   | Back         |   | Back / Return               |
|  | Exit         |  | Exit / Cancel / Clear       |
|  | Red          |  | Red / Netflix / Search      |
|  | Home         |  | Menu / Home                 |
|  | Green        |  | Green / APP / Repeat        |
|  | Yellow       |  | Yellow / YouTube / Repeat   |
|  | Blue         |  | Blue / Prime Video / Random |





Originalfernbedienung Ersatzfernbedienung

|   |             |   |                            |
|---|-------------|---|----------------------------|
|    | <<          |    | << / Tune-                 |
|    | >>          |    | >> / Tune+                 |
|    | Play        |    | Play / Slow                |
|    | Pause       |    | Pause / Step / Freeze      |
|    | Stop        |    | Stop / Hold                |
|    | Subt        |    | Subtitle / EQ              |
|    | Audio       |    | Audio / Lang I/II          |
|    | TXT         |    | Text / Goto                |
|    | Netflix     |    | Shift + Red / Netflix /    |
|   | YouTube     |   | Shift + Yellow / YouTube / |
|  | prime video |  | Shift + Blue / Prime       |
|  | Google Play |  | Shift + Green / APP /      |
|   |             |   |                            |
|   |             |   |                            |
|   |             |   |                            |
|   |             |   |                            |
|   |             |   |                            |
|   |             |   |                            |
|   |             |   |                            |
|   |             |   |                            |
|   |             |   |                            |
|   |             |   |                            |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

