





 







 

 

 





 





 

 





Originalfernbedienung Ersatzfernbedienung

	A.Monitor		Mute / Dimmer
	Power		Power
	A / B		Yellow / YouTube / Repeat
	TV / VCR		AV / Input / RDS
	Prog. Check		D.Menu / Top
	Display		Display / Media
	OSD / Enter		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Cancel		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	0		0
	Timer		Sleep / Timer
	Start+		Shift + Up
	Stop+		Shift + Right
	Date+		Shift + CH+ /
	Start-		Shift + Down
	Stop-		Shift + Left
	Date-		Shift + CH- /
	Prog.		TV/Radio /
	SP/LP / SP/EP		Setup / OPT /
	DV		CH+ / Page+
	VHS		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold



