
 

 
 









 



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	MUSIC		TV/R
	MENU		Menu
	ENTER		Ok
	UP		Up
	DOWN		Down
	>>I		>>I
	>>I		Right
	>>I		>>
	I<<		<<
	I<<		I<<
	I<<		Left
	PLAY / PAUSE		Play
	PLAY / PAUSE		Pause
	MUTE		Mute
	MEMORY		D. Menu
	STEREO / MONO		Dual

Originalfernbedienung Ersatzfernbedienung

	CLOCK		Sleep
	DIMMER		Text
	EQ RESET		Options
	BASS+		Smart
	BASS-		Media
	TREBLE+		Ch +
	TREBLE-		Ch -
	Vol-		Vol -
	Vol+		Vol +
	Repeat		Back

