



 

 

 
 
 
 


 
 
 

 





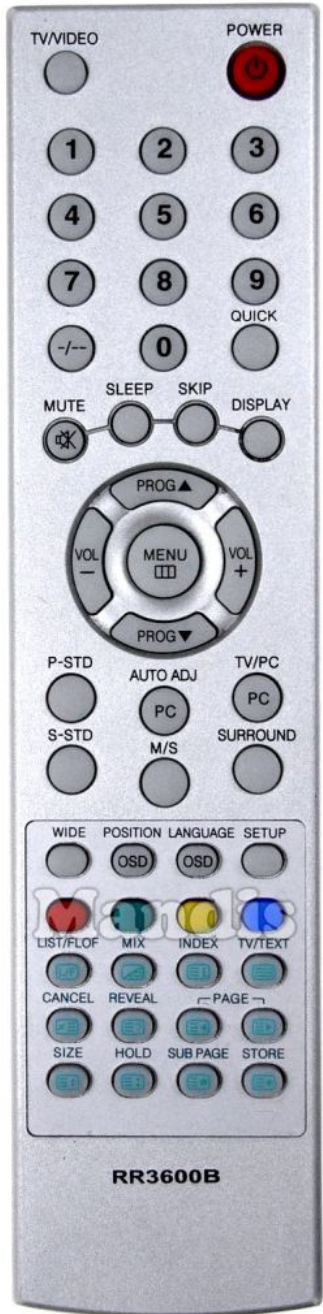
Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / Video		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	/--		Guide
	Quick		Pre Ch
	Mute		Mute
	Sleep		Sleep
	Skip		Exit

Originalfernbedienung Ersatzfernbedienung

	Display		Info
	Up / Prog +		Ch +
	Up / Prog +		Up
	Down / Prog -		Ch -
	Down / Prog -		Down
	Right / Vol +		Vol +
	Right / Vol +		Right
	Left / Vol -		Vol -
	Left / Vol -		Left
	Menu		Menu
	Menu		Ok
	P-STD		Shift + Format
	S-STD		Dual
	PC Auto ADJ		Smart
	PC / TV/PC		Media
	M / S		TV/R
	Surround		Shift + Dual











**Originalfernbedienung Ersatzfernbedienung**

	Wide		Format
	OSD Position		3D
	OSD Language		Shift + 3D
	Setup		Options
	Red		Red
	Green		Green
	List / FLOF		List
	Yellow		Yellow
	Blue		Blue
	Mix		Shift + Text
	Index		Shift + Info
	TV / Text		Text
	Cancel		Back
	Subpage		Subt
	Reveal		Play
	Page -		I<<
	Page +		>>I

**Originalfernbedienung Ersatzfernbedienung**

	Size		Eject
	Hold		Stop
	Store		Shift + Smart

