





















Originalfernbedienung Ersatzfernbedienung

	A/B		Yellow / YouTube / Repeat
	M		Menu / Home
	F		Smart / List
	Power		Power
	L		Display / Media
	i		Info / Angle
	⌚		Sleep / Timer
	TV		TV/Radio /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Mute		Mute / Dimmer
	⊕		Audio / Lang I/II
	R		AV / Input / RDS
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

