



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info / Angle
	TV		Smart / List
	OK		OK
	F		Fav / Marker / PC
	R		TV/Radio /
	M		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Timer		Sleep / Timer
	Mute		Mute / Dimmer
	Up		Up
	CH+		CH+ / Page+
	Down		Down
	CH-		CH- / Page-
	Right		Right
	Vol+		Vol+
	Left		Left
	Vol-		Vol-
	RC/A/B		Audio / Lang I/II
	X		AV / Input / RDS
	E/L		Display / Media
	A/OO		Subtitle / EQ
	??		Back / Return
	??		Exit / Cancel / Clear
	??		Picture / Format

