 



 











 















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play/Pause		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	EQ.Effect		Sound / Title
	S.W.Effect		Audio / Lang I/II
	P.Open/Close		Eject / Surround
	P.Mode		Picture / Format
	Sleep		Sleep / Timer
	Tuner Band		TV/Radio /
	Presence		D.Menu / Top
	AI/Loudness		Setup / OPT /
	AI/Auto/Focus/GE		Text / Goto
	LD/AUX		AV / Input / RDS
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Check		OK
	Right		Right
	Clear		Exit / Cancel / Clear
	Down		Down
	Volume Control +		Vol+
	M.Call		Smart / List
	P.Call Up		CH+ / Page+
	Volume Control -		Vol-
	Display		Display / Media
	P.Call Down		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
















Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Edit		Fav / Marker / PC
	Repeat		Green / APP / Repeat
	S.W.Power	 + 	Shift + Power
	Off	 + 	Shift + Mute / Dimmer
	S.W.Vol+	 + 	Shift + Vol+
	P	 + 	Shift + Smart / List
	S.W.Vol-	 + 	Shift + Vol-
	Changer CD 1	 + 	Shift + 1
	Changer CD 2	 + 	Shift + 2
	CD	 + 	Shift + 3
	Changer CD 4	 + 	Shift + 4
	Tape	 + 	Shift + 5

Originalfernbedienung Ersatzfernbedienung

	Tuner	 + 	Shift + 6
	Changer CD 3	 + 	Shift + 7
	Changer CD 5	 + 	Shift + 8
	Changer CD 6	 + 	Shift + 9





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Pause Tape B		Pause / Step / Freeze
	Stop Tape A		Stop / Hold
	Rec Tape B		Rec / Rec Mode
< Tape A button"/>	< Tape A		<< / Tune-
	> Tape A		>> / Tune+
	<< Tape A		I<< / Preset-
	>> Tape A		>>I / Preset+
LD/AUX			AV / Input / RDS
	Volume Control +		Vol+
	Volume Control -		Vol-
CD			3
Tape			5
Tuner			6
	Stop Tape B		Shift + Stop /
	< Tape B		Shift + << /

Tune-

Originalfernbedienung Ersatzfernbedienung

	> Tape B		Shift + >> /
	<< Tape B		Shift + I<< / Preset-
	>> Tape B		Shift + >>I / Preset+

