












 





 




 



 

 

 

 

 

 

 

 

 

 

 

 

 



 

 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	P.Mode		Picture / Format
	Time Disp.		Sleep / Timer
	Output Up		Up
	Clear		Exit / Cancel / Clear
	Output Down		Down
	Skip		Back / Return
	Check		Smart / List
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/-
	0		0
	Edit		Fav / Marker / PC
	Repeat		Green / APP / Repeat
	Random		Blue / Prime Video / Random
	Disc Selector 1		Shift + 1
	Disc Selector 2		Shift + 2
	Disc Selector 3		Shift + 3
	Disc Selector 4		Shift + 4
	Disc Selector 5		Shift + 5

