



**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute / Dimmer
	TV/SAT		AV / Input / RDS
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Sat List		Smart / List
	0		0
	TV/R		TV/Radio /
	CH-PG+		CH+ / Page+
	EPG		Guide / EPG / -/-

**Originalfernbedienung    Ersatzfernbedienung**

	Vol+		Vol+
	CH/PG-		CH- / Page-
	FAV		Fav / Marker / PC
	Vol-		Vol-
	Info		Info / Angle
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red / Audio		Red / Netflix / Search
	Red / Audio		Audio / Lang I/II
	Green / Subt		Green / APP / Repeat
	Green / Subt		Subtitle / EQ



