


 

 

 


 



 
 
 
 
 
 
 
 
 
 
 

 
 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Tv/Radio		TV/R
	Subtitle		Subt
	Q Menu		Menu
	Guide		Guide
	[]/Ratio		Dual
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	List		List
	Q.View		Format
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	APP/*		Shift + Media
	Fav		Pre Ch
	PR+		Ch +
	PR-		Ch -
	Text		Text
	Info		Info
	T.Opt		Options
	Smart		Smart
	My Apps		Media
	Back		Back
	Exit		Exit
	Up		Up





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Settings	+	Shift + Options
	Rec		Rec
	Stop/Line Tv		Stop
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

