

 



 



 




 

 

 





 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject / Surround
	Power Tv		Shift + Power
	1		1
	2		2
	3		3
	PR+ Tv		CH+ / Page+
	5		5
	6		6
	PR- Tv		CH- / Page-
	4		4
	7		7
	8		8
	9		9
	Vol+ Tv		Vol+
	Lock		Text / Goto
	0		0


Originalfernbedienung Ersatzfernbedienung

	AV Tv		Shift + AV / Input / RDS
	Vol- Tv		Vol-
	Rec ITR		Rec / Rec Mode
	LP		Display / Media
	REW		<< / Tune-
	FF		>> / Tune+
	Pause/Still		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	i/Menu		Info / Angle
	i/Menu		Menu / Home
	Up/+		Up
	AV		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Clear		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Down/-		Down
	TV/VCR		Smart / List
	ez REPEAT		Green / APP / Repeat
	CM Skip		Yellow / YouTube / Repeat
	ez POWER OFF		Red / Netflix / Search
	*		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

