

 

 





 

 

 

 

 

 

 

 
 


 

 

 

 

 

 

 

 





 
 
 

 



 

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Q.View		Sound / Title
	Home		Menu / Home
	Q.Menu		D.Menu / Top
	Guide		Guide / EPG / -/--
	List		Smart / List
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Tv/Rad		TV/Radio /
	AV Mode		Shift + AV / Input / RDS
	Energy/Saving		Eject / Surround
	Portal		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Back		Back / Return
	OK		OK
	Up		Up
	Down		Down
	Right		Right
	Left		Left





**Originalfernbedienung**   **Ersatzfernbedienung**

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	AD		Audio / Lang I/II
	Play		Play / Slow
	T.Opt		Setup / OPT /
	Alarm		Sleep / Timer
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Simplink		Zoom / Size
	<<		<< / Tune-
	>>		>> / Tune+
	Ratio		Picture / Format
	Mark		Fav / Marker / PC

**Originalfernbedienung**   **Ersatzfernbedienung**