 



 
 
 
 

 
 

 

 
 
 

 
 



 

 

 

 

 
 
 


 
 



 

 
 
 



 

 

 
 
 
 
 

 
 
 

 

 







**Originalfernbedienung Ersatzfernbedienung**

 


 
 
 







 

 

	Power		Power
	E-Manual	 + 	Shift + D. Menu
	[ ]/Ratio		Dual
	Input		AV
	Tv/Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Format

**Originalfernbedienung Ersatzfernbedienung**

	3D		3D
	Vol+		Vol +
	Vol-		Vol -
	FAV		Pre Ch
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Home		Smart
	Back		Back
	My		D. Menu
	Guide		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	OK		Ok				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Text		Text				
	Subtitle		Subt				
	Stop/Live Tv		Stop				
	T.Opt		Options				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				
	Rec		Rec				
	Info		Info				
	Simplink		Media				
	Saving Energy		Shift + 3D				

