 

 

 
 
 


 


 











 
 
 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	Subtitle		Subt
	Info/Menu		Menu
	Disc Menu		D. Menu
	Home		Smart
	Back		Back
	Sleep		Sleep
	Function		AV
	Title/PopUp		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Play		Play
	Pause/Step		Pause
	Stop		Stop
	<< Scan		<<

Originalfernbedienung Ersatzfernbedienung

	Scan >>		>>
	I<< Skip		I<<
	Skip >>I		>>I
	Enter		Ok
	Up/Presets+		Up
	Down/Presets-		Down
	Left/Tuning-		Left
	Right/Tuning+		Right
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Mono/Stereo		Blue
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
REC	Rec	REC MODE	Rec
AUDIO	Audio	SOUND DUAL	Dual
MIC/ECHO	MIC/ECHO	SETTINGS OPT	Options
REPEAT	Repeat	REPEAT TEXT	Text
CLEAR	Clear	CLEAR EXIT	Exit
*	*	-/-- GUIDE	Guide
OPTICAL/TV SOUND	Optical/Tv Sound	SEARCH TV/R	TV/R
SOUND EFFECT	Sound Effect	ECO 3D	3D
SPEAKER LEVEL	Speaker Level	PICTURE FORMAT	Format
POWER	Power Tv	SHIFT + POWER	Shift + Power
AV / INPUT	AV/Input Tv	SHIFT + TIMER AV	Shift + AV
PR/CH	PR/CH+ Tv	+ CH	Ch +

Originalfernbedienung Ersatzfernbedienung

PR/CH -	PR/CH- Tv	CH -	Ch -
+ VOL	Vol+ Tv	SHIFT + + VOL	Shift + Vol +
VOL -	Vol- Tv	SHIFT + VOL -	Shift + Vol -
MUTE	Mute Tv	SHIFT + MUTE	Shift + Mute

