

 
 
 

 

 
 
 
 

 

 

 






 

 

 

 
 
 
 
 

 



 
 
 
 
 



 

 

 
 
 

 







 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Energy Saving		3D
	AV Mode		Shift + AV
	Input		AV
	TV / Rad		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Vol +		Vol +
	Vol -		Vol -
	Fav Mark		Shift + Pre Ch
	Ratio		Format
	Mute		Mute
	P + / Page +		Ch +
	P - / Page -		Ch -
	Menu		Menu
	Guide		Guide
	Q.Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Back		Back
	Info		Info



