














 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	Tv/PVR		Tv/Radio /
	Vol-		Vol-
	Vol+		Vol+
	Av Input Tv		AV / Input / RDS
	1		1
	2		2
	3		3
	PR/CH+ Tv		Shift + CH+ /
	4		4
	5		5
	6		6
	PR/CH- Tv		Shift + CH- /
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	Vol+ Tv		Shift + Vol+
	Rec		Rec / Rec Mode
	0		0
	Timeshift		Setup / OPT /
	Vol- Tv		Shift + Vol-
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	I<<< Skip		I<<< / Preset-
	Skip >>>I		>>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	Guide		Guide / EPG / -/-
	Up		Up
	Left		Left
	OK		OK



