 

 

 

 



 





 



 

 

 



 

 
 


 









 









 





 

 

 







**Originalfernbedienung Ersatzfernbedienung**

 

 



 

 

 

 

 





 

 


 




 

 

	Input/Tuner		AV / Input / RDS
	Power		Power
	Open/Close		Eject / Surround
	iPod		Shift + 8
	PIP		Zoom / Size
	Display		Display / Media
	Home		Menu / Home
	Disc Menu		D.Menu / Top
	Up/Presets		Up
	Left/Tun.-		Left
	Enter		OK
	Right/Tun.+		Right
	Down/Presets		Down
	Return		Back / Return
	Title/PopUp		Shift + Sound / Title
	Stop		Stop / Hold
	Play		Play / Slow

**Originalfernbedienung Ersatzfernbedienung**

 

 

 



	Pause/step		Pause / Step / Freeze
	l<< Skip		l<< / Preset-
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	Skip >>l		>>l / Preset+
	SKP Level		Setup / OPT /
	Vol+		Vol+
	Sound		Sound / Title
	Mute		Mute / Dimmer
	Vol-		Vol-
	Night		TV/Radio /
	1		1
	2		2
	3		3
	Marker		Fav / Marker / PC
	4		4
	5		5




**Originalfernbedienung    Ersatzfernbedienung**

	6		6
	Search		Shift + Red / Netflix /
	7		7
	8		8
	9		9
	Repeat		Shift + Green / APP /
	[...]/Subtitle		Subtitle / EQ
	0		0
	Resolution		Picture / Format
	Clear		Exit / Cancel / Clear
	Red/RDS		Red / Netflix / Search
	Green/PTY		Green / APP / Repeat
	Yellow/PTY Search		Yellow / YouTube / Repeat
	Blue/Mo./St.		Blue / Prime Video / Random
	Power Tv		Shift + Power
	PR/CH+ Tv		CH+ / Page+
	Vol+ Tv		Shift + Vol+

**Originalfernbedienung    Ersatzfernbedienung**

	Input Tv		Shift + AV / Input / RDS
	PR/CH- Tv		CH- / Page-
	Vol- Tv		Shift + Vol-
	Sleep		Sleep / Timer

