



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	e/Energy/Savin		Sleep / Timer
	AV Mode		Shift + AV / Input / RDS
	Input		AV / Input / RDS
	TV/RAD		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	FAV/Mark		Fav / Marker / PC
	P + / Page +		CH+ / Page+
	Vol-		Vol-
	Ratio		Picture / Format
	P - / Page -		CH- / Page-
	Mute		Mute / Dimmer
	Guide		Guide / EPG / -/-
	Home		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Info		Info / Angle





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	T.Opt		Setup / OPT /
	Subtitle		Subtitle / EQ
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Simplink		Sound / Title

Originalfernbedienung Ersatzfernbedienung

