



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	Power Tv	 + 	Shift + Power
	1		1
	2		2
	3		3
	PR/CH+ Tv		CH+ / Page+
	4		4
	5		5
	6		6
	PR/CH- Tv		CH- / Page-
	7		7
	8		8
	9		9
	Vol+ Tv		Vol+
	Clear		Exit / Cancel / Clear
	0		0








Originalfernbedienung Ersatzfernbedienung

	AV/Input		AV / Input / RDS
	Vol- Tv		Vol-
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>> / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Home		Menu / Home
	Up		Up
	Info/Display		Info / Angle
	Right		Right
	Enter		OK
	Left		Left
	Back		Back / Return
	Down		Down





Originalfernbedienung Ersatzfernbedienung

	Disc Menu		D.Menu / Top
	Zoom		Zoom / Size
	Marker		Fav / Marker / PC
	Search		Shift + Red / Netflix /
	Title/Pop-Up		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Repeat		Shift + Green / APP /
	O))/Audio		Audio / Lang I/II
	[...]/Subtitle		Subtitle / EQ
	Tv Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

