



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Energy Saving		Sleep / Timer
	AV Mode		Picture / Format
	Input		AV / Input / RDS
	Tv/Rad		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.Vlew		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	FAV/Mark/Char/Nu		Fav / Marker / PC
	P+		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	Mute/Delete		Mute / Dimmer
	P-		CH- / Page-
	Menu		Menu / Home
	NetCast		Sound / Title
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Back		Back / Return





Originalfernbedienung

Ersatzfernbedienung

	Guide		Guide / EPG / -/--
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/L/R/Select		Blue / Prime Video / Random
	Text		Text / Goto
	T.Opt		Shift + Setup / OPT / Tools
	Subtitle		Subtitle / EQ
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
<< button"/>	<<		<< / Tune-
	>>		>> / Tune+
	Simplink		Display / Media
	Info		Info / Angle
	AD		Audio / Lang I/II
	APP/*		Shift + Green / APP / Repeat

Originalfernbedienung

Ersatzfernbedienung

