

 












 


 



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	FM/AM		Shift + 6
	CD/DVD		Shift + 3
	CD/DVD		Shift + 2
	Video 1		Shift + 1
	Video 2		Shift + 4
	Sleep		Sleep / Timer
	Preset-		CH- / Page-
	Preset-		Shift + I<< / Preset-
	Preset+		CH+ / Page+
	Preset+		Shift + I>> / Preset+
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	Volume-		Vol-
	Volume+		Vol+
	Play		Play / Slow
	Pause / Step		Pause / Step / Freeze
	Stop		Stop / Hold
	I<<< / Skip-		I<< / Preset-
	I>>> / Skip+		I>> / Preset+
	Prog		TV/Radio /
	Repeat		Green / APP / Repeat
	Test Tone		Text / Goto
	Sound Mode		Sound / Title
	By Pass		Yellow / YouTube / Repeat



