





































Originalfernbedienung Ersatzfernbedienung

Power		Power
Recent		Shift + Guide / EPG / -/-
TV / PC		Shift + Fav / Marker / PC
My APPS		Display / Media
AV Mode		Shift + AV / Input / RDS
T.Opt		Shift + Setup / OPT / Tools
Q.View		Eject / Surround
Energy Saving		Sleep / Timer
Live Zoom		Shift + Zoom /
Live Menu		Shift + Menu /
3D		Zoom / Size
AD / PIP		Sound / Title
>>		>> / Preset+
<<		<< / Preset-
Home / Smart		Menu / Home
Stop / Live TV		Stop / Hold
Blue		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

Yellow		Yellow / YouTube / Repeat
Green		Green / APP / Repeat
Red		Red / Netflix / Search
AD		Audio / Lang I/II
Search		Shift + Red / Netflix /
App		Shift + Green / APP /
TV / Radio		TV/Radio /
Guide		Guide / EPG / -/-
Info		Info / Angle
Input		AV / Input / RDS
List		Smart / List
1		1
2		2
3		3
4		4
5		5
6		6



