


 

 

 

 

 

 

 



 

 

 





 
 
 






Originalfernbedienung Ersatzfernbedienung


|   |             |   |       |
|---|-------------|---|-------|
|    | Power       |    | Power |
|    | Mute        |    | Mute  |
|    | 1           |    | 1     |
|    | 2           |    | 2     |
|    | 3           |    | 3     |
|    | 4           |    | 4     |
|    | 5           |    | 5     |
|    | 6           |    | 6     |
|    | 7           |    | 7     |
|    | 8           |    | 8     |
|   | 9           |   | 9     |
|  | 0/AV        |  | 0     |
|  | EPG/←       |  | Guide |
|  | Media       |  | Media |
|  | PIP/[ ]     |  | 3D    |
|  | Text/Disc-M |  | Text  |
|  | Menu        |  | Menu  |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |        |
|---|-------------|---|--------|
|    | End         |    | Exit   |
|    | Info        |    | Info   |
|    | Up          |    | Up     |
|    | OK          |    | Ok     |
|    | Down        |    | Down   |
|    | Right       |    | Right  |
|    | Left        |    | Left   |
|    | Red         |    | Red    |
|    | Green       |    | Green  |
|    | Yellow      |    | Yellow |
|   | Blue/Marker |   | Blue   |
|  | Vol+        |  | Vol +  |
|  | Vol-        |  | Vol -  |
|  | P+          |  | Ch +   |
|  | P-          |  | Ch -   |
|  | <<          |  | <<     |
|  | Play        |  | Play   |




**Originalfernbedienung**   **Ersatzfernbedienung**

|   |            |   |         |
|---|------------|---|---------|
|  | >>         |  | >>      |
|  | Pause      |  | Pause   |
|  | Stop       |  | Stop    |
|  | Rec/HDMI   |  | Rec     |
|  | Sound      |  | Dual    |
|  | →[ ]←/Zoom |  | Format  |
|  | O/Pop-Up-M |  | D. Menu |
|  | Audio      |  | Subt    |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |




 

 



 

 

 

 

 

 

 





 
 


 


**Originalfernbedienung**   **Ersatzfernbedienung**

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |



 
 


 
 
 

 

 

 

 




 





 
 









Originalfernbedienung Ersatzfernbedienung

|   |             |   |       |
|---|-------------|---|-------|
|    | Power       |    | Power |
|    | 1           |    | 1     |
|    | 2           |    | 2     |
|    | 3           |    | 3     |
|    | 4           |    | 4     |
|    | 5           |    | 5     |
|    | 6           |    | 6     |
|    | 7           |    | 7     |
|    | 8           |    | 8     |
|    | 9           |    | 9     |
|   | 0/AV        |   | 0     |
|  | EPG/←       |  | Guide |
|  | Media       |  | Media |
|  | PIP/[ ]     |  | 3D    |
|  | Text/Disc-M |  | Text  |
|  | Menu        |  | Menu  |
|  | End         |  | Exit  |



 
 

 
Originalfernbedienung Ersatzfernbedienung

|   |             |   |        |
|---|-------------|---|--------|
|    | Info        |    | Info   |
|    | OK          |    | Ok     |
|    | Up          |    | Up     |
|    | Down        |    | Down   |
|    | Right       |    | Right  |
|    | Left        |    | Left   |
|    | P+          |    | Ch +   |
|    | P-          |    | Ch -   |
|    | Red         |    | Red    |
|    | Green       |    | Green  |
|   | Yellow      |   | Yellow |
|  | Blue/Marker |  | Blue   |
|  | <<          |  | <<     |
|  | Play        |  | Play   |
|  | >>          |  | >>     |
|  | Pause       |  | Pause  |
|  | Stop        |  | Stop   |





Originalfernbedienung Ersatzfernbedienung

|   |            |   |         |
|---|------------|---|---------|
|  | Rec        |  | Rec     |
|  | →[ ]←/Zoom |  | Format  |
|  | O/Pop-Up-M |  | D. Menu |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |
|   |            |   |         |




 

 



 

 

 

 

 

 

 





 
 


 


Originalfernbedienung Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |














 








 
 
 
 
 

 

 
 
 





Originalfernbedienung Ersatzfernbedienung

|   |             |   |       |
|---|-------------|---|-------|
|    | Power       |    | Power |
|    | 1           |    | 1     |
|    | 2           |    | 2     |
|    | 3           |    | 3     |
|    | 4           |    | 4     |
|    | 5           |    | 5     |
|    | 6           |    | 6     |
|    | 7           |    | 7     |
|    | 8           |    | 8     |
|    | 9           |    | 9     |
|   | 0/AV        |   | 0     |
|  | EPG/←       |  | Guide |
|  | Media       |  | Media |
|  | PIP/[ ]     |  | 3D    |
|  | Text/Disc-M |  | Text  |
|  | Menu        |  | Menu  |
|  | End         |  | Exit  |

 

 


 
Originalfernbedienung Ersatzfernbedienung

|   |             |   |         |
|---|-------------|---|---------|
|    | Info        |    | Info    |
|    | Red         |    | Red     |
|    | Green       |    | Green   |
|    | Yellow      |    | Yellow  |
|    | Blue/Marker |    | Blue    |
|    | <<          |    | <<      |
|    | Play        |    | Play    |
|    | >>          |    | >>      |
|    | Rec         |    | Rec     |
|    | Pause       |    | Pause   |
|   | Stop        |   | Stop    |
|  | O/Pop-Up-M  |  | D. Menu |
|  | →[ ]←/Zoom  |  | Format  |
|  | Up          |  | Up      |
|  | OK          |  | Ok      |
|  | Down        |  | Down    |
|  | Right       |  | Right   |





Originalfernbedienung Ersatzfernbedienung

|   |      |   |      |
|---|------|---|------|
|  | Left |  | Left |
|  | P+   |  | Ch + |
|  | P-   |  | Ch - |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |
|   |      |   |      |

Originalfernbedienung Ersatzfernbedienung

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

