



 

 

 

 

 


 
 







 

 

 

 

 

 





 



 

 

 

 

 









Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	O/F.Set		Sleep / Timer
	[ ]/F. List		Smart / List
	Audio		Audio / Lang I/II
	[+]/Picture		Picture / Format
	→[ ]←/Rec Menu		D.Menu / Top
	Radio/Search		TV/Radio /
	Radio/Search		Shift + Red / Netflix /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	*EPG		Guide / EPG / -/-
	0/AV		0
	0/AV		AV / Input / RDS
# PIP button" data-bbox="506 348 539 378"/>	# PIP		Setup / OPT /
	Text		Text / Goto
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Down		Down
	Vol+		Vol+
	Right		Right





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	P-		CH- / Page-				
	Red/C-Set		Red / Netflix / Search				
	Green/SV		Green / APP / Repeat				
	Yellow/Title		Sound / Title				
	Yellow/Title		Yellow / YouTube / Repeat				
	Blue/Card		Blue / Prime Video / Random				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				

 



 

 

 

 

 


 



 

 















## Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	*EPG		Guide / EPG / -/--
	0/AV		AV / Input / RDS
	0/AV		0
	#PIP		Picture / Format
	Menu		Menu / Home
	Info		Info / Angle


 


 
 
## Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Down		Down
	Vol+		Vol+
	Right		Right
	P-		CH- / Page-
	Red/C-Set		Red / Netflix / Search
	Green/SV		Green / APP / Repeat
	Yellow/Title		Yellow / YouTube / Repeat
	Yellow/Title		Sound / Title
	Blue/Card		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+





Originalfernbedienung Ersatzfernbedienung





 

 

 

 

 

 



 









 

 

 

	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung









## Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	O/F.Set		Sleep / Timer
	[ ]/F. List		Smart / List
	Audio/Repeat		Shift + Green / APP /
	Audio/Repeat		Audio / Lang I/II
	[+]/Picture		Picture / Format
	→[ ]←/Rec Menu		Text / Goto
	Radio/Search		Shift + Red / Netfix /
	Radio/Search		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7


## Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	DVD-AV		AV / Input / RDS
	0/AV		0
	# PIP		Setup / OPT /
	Disc-M		D.Menu / Top
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Down		Down
	Vol+		Vol+
	Right		Right





Originalfernbedienung Ersatzfernbedienung





 

 

 

 

 

 



 









 

 

 

	P-		CH- / Page-
	Red/C-Set		Red / Netflix / Search
	Green/SV		Green / APP / Repeat
	Yellow/Title		Yellow / YouTube / Repeat
	Yellow/Title		Sound / Title
	Blue/Card		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Originalfernbedienung Ersatzfernbedienung

 

 

 

 


 







 
 












**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Power		Power
	O/F.Set		Sleep / Timer
	[ ]/F.List		Smart / List
	Audio/Repeat		Green / APP / Repeat
	Audio/Repeat		Audio / Lang I/II
	[+]/Picture		Picture / Format
	→[ ]←/Rec Menu		D.Menu / Top
	Radio/Search		Red / Netflix / Search
	Radio/Search		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

**Originalfernbedienung Ersatzfernbedienung**

	8		8
	9		9
	*EPG		Guide / EPG / -/--
	0/AV		0
	0/AV		AV / Input / RDS
# PIP button" data-bbox="506 395 540 425"/>	#PIP		Setup / OPT /
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Down		Down
	Vol+		Vol+
	Right		Right





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------	-----------------------	---------------------

	P-		CH- / Page-
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

