





Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	TV		TV/Radio /
	DVD		Shift + 2
	Radio		Shift + TV/Radio / Program
	Rec Menu		Shift + Rec / Rec Mode
	[-]/[-<]AB		Shift + Yellow / YouTube /
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0/AV		0
	EPG/DVD-AV		Guide / EPG / -/-
	Assist/Card		Smart / List
	PIP		Picture / Format
	Text/Disc-M		Text / Goto
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	Vol+		Vol+
	Up		Up
	P+		CH+ / Page+
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-



 




Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Power		Power
	TV		TV/Radio /
	DVD		Shift + 2
	Radio		Shift + TV/Radio / Program
	Rec Menu		Shift + Rec / Rec Mode
	[-]/[-]AB		Shift + Yellow / YouTube /
	Audio		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0/AV		0
	EPG/DVD-AV		Guide / EPG / -/-
	Assist/Card		Smart / List
	PIP		Picture / Format
	Text/Disc-M		Text / Goto
	Menu		Menu / Home
	End		Exit / Cancel / Clear
	Info		Info / Angle
	Vol+		Vol+
	Up		Up
	P+		CH+ / Page+
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-

 







Originalfernbedienung Ersatzfernbedienung









	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Audio		Audio / Lang I/II
	PIP		Picture / Format
	Tv		TV/Radio /
	Text/Disc-M		Text / Goto
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK

Originalfernbedienung Ersatzfernbedienung


















	Right		Right
	End		Exit / Cancel / Clear
	Down		Down
	Vol+		Vol+
	Assist/Card		Smart / List
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9




Originalfernbedienung Ersatzfernbedienung

Power		Power
Mute		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Rec		Rec / Rec Mode
<<		<< / Tune-
>>		>> / Tune+
Audio		Audio / Lang I/II
PIP		Picture / Format
TV		TV/Radio /
Text/Disc-M		Text / Goto
Menu		Menu / Home
Up		Up
Info		Info / Angle
Left		Left
OK		OK

Originalfernbedienung Ersatzfernbedienung

Right		Right
End		Exit / Cancel / Clear
Down		Down
Vol+		Vol+
Assist/Card		Smart / List
P+		CH+ / Page+
Vol-		Vol-
P-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9



