








 













 





 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Auto		Smart
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Aspect		3D
	Audio		Dual
	Display		Info
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep
	FAV		Pre Ch



