

 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	TV / AV		AV
	Green / Timer		Green
	Green / Timer		Shift + AV
	Blue / QV		Blue

Originalfernbedienung Ersatzfernbedienung

	Red / Info		Red
	Red / Info		Info
	V-PP		Options
	Yellow / V-PP		Yellow
	Zoom		Eject
	A-PP		Dual
	Up / P+		Up
	Up / P+		Ch +
	Menu		Ok
	Down / P-		Down
	Down / P-		Ch -
	Right / V+		Right
	Right / V+		Vol +
	Left / V-		Left
	Left / V-		Vol -
	Menu		Menu
	Reveal		Smart





Originalfernbedienung Ersatzfernbedienung

SIZE	Size	PICTURE FORMAT	Format
MIX	Mix	SHIFT + REPEAT TEXT	Shift + Text
TV/TXT	TV / TXT	REPEAT TEXT	Text
CANCEL	Cancel	RETURN BACK	Back
SUBCODE	Subcode	AD SUBT	Subt
INDEX	Index	APP MEDIA	Media
STOP	Stop	[Stop Button]	Stop

Originalfernbedienung Ersatzfernbedienung