

 













 



 

 



 





 





**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Source		AV / Input / RDS
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Freeze		Pause / Step / Freeze
	Txt		Text / Goto
	Mix / Fav. List		Fav / Marker / PC
	Size / Subtitle		Subtitle / EQ
	Cancel / Audio		Audio / Lang I/II
	Zoom		Zoom / Size
	<< / Index		<< / Tune-
	>> / Hold		>> / Tune+
	I<< / Reveal		I<< / Preset-

**Originalfernbedienung    Ersatzfernbedienung**

	>>I / Subpage		>>I / Preset+
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Play / Pause		Play / Slow
	Down		Down
	Stop		Stop / Hold
	Vol +		Vol+
	Mute		Mute / Dimmer
	CH +		CH+ / Page+
	Vol -		Vol-
	TV / Radio		TV/Radio /
	CH -		CH- / Page-
	1		1





Originalfernbedienung Ersatzfernbedienung

2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
DISPLAY	Display	MEDIA DISPLAY	Display / Media
0	0	HDMI - SAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

Originalfernbedienung Ersatzfernbedienung