








 


 

 

 




Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute
Return TV		TV/R
TV/AV		AV
Menu		Menu
Menu Up		Up
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Volume-		Vol -
Chan.Down		Ch -
1		1
2		2

Originalfernbedienung Ersatzfernbedienung

3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch

