

 
 





 




**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Display		Shift + Info
	Nicam / Eject		Eject
	Mute		Mute
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep
	Aspect		Format
	Vol -		Vol -
	Vol +		Vol +
	CH -		Ch -
	CH +		Ch +
	LCD-Menu		Menu
	DVD-Setup		Options
	Up		Up
	Left		Left
	Enter		Ok

**Originalfernbedienung Ersatzfernbedienung**

	Right		Right
	Down		Down
	Source		AV
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Text / Audio		Text
	Hold / A-B / Rec List		Smart





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Rec	 Rec	 I> Step	 Shift + Pause
 Time Shift	 Media	 >>	 >>>
 Red / Repeat	 Red	 Subtitle	 Subt
 Red / Repeat	 Shift + Text	 EPG / Program	 Guide
 Green / Zoom	 Green	 FAV	 Pre Ch
 Green / Zoom	 Shift + Eject	 EPG / Program	 Shift + Sleep
 Yellow / Angle	 Yellow	 Info / Title	 Info
 Blue / Goto	 Blue		
 Index / I<<	 I<<		
 Size / Stop	 Stop		
 Rev. / Play/Pause	 Play		
 Rev. / Play/Pause	 Pause		
 Sub.P / >>I	 >>I		
 TV/Radio / <<	 <<		
 TV/Radio / <<	 TV/R		
 Lang / Menu	 Dual		
 Lang / Menu	 D. Menu		

