



Originalfernbedienung	Ersatzfernbedienung
 Open/Close	 Eject / Surround
 Display	 Display / Media
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Title/Return	 Back / Return
 0	 0
 Search	 Red / Netflix / Search
 Menu/Disc	 Menu / Home
 Up	 Up

Originalfernbedienung	Ersatzfernbedienung
 Setup	 Setup / OPT /
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat





Originalfernbedienung Ersatzfernbedienung

	Slow		Fav / Marker / PC		
	Step		+		Shift + Pause / Step /

Originalfernbedienung Ersatzfernbedienung

