



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	OSD		Display / Media
	Step	 + 	Shift + Pause / Step /
	DVD/USB		Smart / List
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Guide / EPG / -/--

Originalfernbedienung Ersatzfernbedienung

	Time		Sleep / Timer
	Title		Sound / Title
	Play		Play / Slow
	Menu		Menu / Home
	Setup		Setup / OPT /
	Zoom		Zoom / Size
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Enter		OK
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	L/R		Picture / Format
	N/P	 + 	Shift + Zoom /
	Vol-		Vol-
	Vol+		Vol+



