

































 

 






 
 


 


 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	PP		Back / Return
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P<P		Fav / Marker / PC
	0		0
	--		Guide / EPG / --
	Info		Info / Angle
	I-II		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	P+		CH+ / Page+
	Left		Left
	M		OK
	M		Menu / Home
	Right		Right
	Down		Down
	P-		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	Red/Sound		Red / Netflix / Search
	Red/Sound		Sound / Title
	Green/Picture		Green / APP / Repeat
	Green/Picture		Picture / Format
	Yellow/Feature		Yellow / YouTube / Repeat
	Blue/Install		Blue / Prime Video / Random
	TV		Display / Media



