



Originalfernbedienung Ersatzfernbedienung

	Power CD		Shift + Power
	Power AMP		Power
	Menu AMP		Menu / Home
	Menu CD		Shift + Menu /
	UP AMP		Up
	Up CD		CH+ / Page+
	Left AMP		Left
	Left CD		Shift + Left
	Enter AMP		OK
	Enter CD		Shift + OK
	Right AMP		Right
	Right CD		Shift + Right
	Down AMP		Down
	Down CD		CH- / Page-
	Info		Info / Angle
	Disc/Input		AV / Input / RDS
	Open/Close		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Random		Blue / Prime Video / Random
	Program		TV/Radio /
	Repeat		Green / APP / Repeat
	Input Up		Shift + Up
	Tone		Audio / Lang I/II
	Vol+		Vol+
	Input Down		Shift + Down
	Vol-		Vol-
	ATT		Shift + Display / Media
	1		1
	2		2
	3		3





Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	Clear		Exit / Cancel / Clear
	Filter		Smart / List
	Noise Shaper		Mute / Dimmer
	DC Filter		Shift + Smart / List
	Phones		Shift + Sound / Title
	Sound Mode		Sound / Title
	Display		Display / Media

Originalfernbedienung Ersatzfernbedienung

