

 





 
 


 

 



 

 
 


 
 

 
 









**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	TV/Audio		7
	AUX2		8
	Tuner		9
	iPod/USB		Guide
	CD		0
	Bluetooth		Pre Ch
	Online Music		Media
	Phono		Smart
	Internet/Radio		TV/R

**Originalfernbedienung    Ersatzfernbedienung**

	Eco		3D
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH/Page+		Ch +
	CH/Page-		Ch -
	Info		Info
	Option		Options
	Back		Back
	Setup		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	I<</Tune-		I<<
	Play		Play



 


 


 
 

 





 
 
 
 


 
 


 
 




 



















 


 
 
 
 
 
 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	TV/Audio		7
	AUX2		8
	Tuner		9
	iPod/USB		Guide
	CD		0
	Bluetooth		Pre Ch
	Online Music		Media
	Phono		Smart
	Internet Radio		TV/R

**Originalfernbedienung    Ersatzfernbedienung**

	CH/Page+		Ch +
	CH/Page-		Ch -
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Back		Back
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	Tune+ / >>I		>>I
	Smart Select 1		D. Menu
	Smart Select 2		Text



