

 




 


 
 



 

 

 
 
 






 
 







 

 






 
 
 
 
 





 

 


 




Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	AMP	 + 	Shift + Power
	Dimmer		Media
	Internet Radio		Red
	OPT/Coax Digital		Options
	USB Digital In		Subt
	Tuner		Dual
	M-XPort		List
	iPod/USB		Blue
	Online Music		Yellow
	Music Server		Green
	Favorite		Pre Ch
	Play		Play
	Pause		Pause
	I<</CH-		I<<
	>>/CH+		>>I
	<</Tuning-		<<


 

 

 

 
 
 
 


 

 

 
 
 

 
 
 
 
 

 
 
 
 
 
Originalfernbedienung Ersatzfernbedienung

	>>/Tuning+		>>
	Stop		Stop
	Input Up		Ch +
	Input Down		Ch -
	Mute		Mute
	M-Dax		Back
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Mode		3D
	Search		TV/R
	Home		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/Memo		Ok





Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Clear		Exit
	Dig.Out		Format
	Random		D. Menu
	Repeat		Text
	Display		Info

Originalfernbedienung Ersatzfernbedienung

