






 

 





 

 




 
 
 
 






 

 


 

 
 
 





**Originalfernbedienung    Ersatzfernbedienung**

|   |           |   |               |
|---|-----------|---|---------------|
|    | AMP Power |    | Power         |
|    | CD Power  |  +  | Shift + Power |
|    | OPT1      |    | D. Menu       |
|    | Coax/CD   |    | Yellow        |
|    | OPT2      |    | Format        |
|    | Analog1   |    | Red           |
|    | Analog2   |    | Green         |
|    | iPod/USB  |    | Blue          |
|    | USB-DAC   |    | 3D            |
|    | I<<       |    | I<<           |
|   | Play      |   | Play          |
|  | Pause     |    | Pause         |
|  | >>I       |    | >>I           |
|  | Stop      |    | Stop          |
|  | Random    |    | Media         |
|  | Repeat    |    | Text          |
|  | Mode      |    | Subt          |

 




 





 

 

 

 
 
 


**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |         |
|---|--------|---|---------|
|    | Info   |    | Info    |
|    | Dimmer |    | Smart   |
|    | Vol+   |    | Vol +   |
|    | Vol-   |    | Vol -   |
|    | Mute   |    | Mute    |
|    | Up     |    | Up      |
|    | Down   |    | Down    |
|    | Right  |    | Right   |
|    | Left   |    | Left    |
|    | Enter  |    | Ok      |
|   | Back   |   | Back    |
|  | Setup  |  | Options |
|  | 1      |  | 1       |
|  | 2      |  | 2       |
|  | 3      |  | 3       |
|  | 4      |  | 4       |
|  | 5      |  | 5       |





Originalfernbedienung Ersatzfernbedienung

|   |            |   |       |
|---|------------|---|-------|
|    | 6          |    | 6     |
|    | 7          |    | 7     |
|    | 8          |    | 8     |
|    | 9          |    | 9     |
|    | 0          |    | 0     |
|    | +10        |    | Guide |
|    | Clear      |    | Exit  |
|    | Program    |    | Sleep |
|    | Time       |    | AV    |
|   | Q.Replay   |   | Dual  |
|  | A-B Repeat |  | TV/R  |
|   |            |   |       |
|   |            |   |       |
|   |            |   |       |
|   |            |   |       |
|   |            |   |       |
|   |            |   |       |
|   |            |   |       |
|   |            |   |       |
|   |            |   |       |
|   |            |   |       |
|   |            |   |       |





 
 
 
 
 
 



 
 
 
 
 



 







 



Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |


 


 



 



 

 


 

 




**Originalfernbedienung    Ersatzfernbedienung**

|   |           |   |               |
|---|-----------|---|---------------|
|    | CD Power  |    | Power         |
|    | AMP Power |  +  | Shift + Power |
|    | OPT1      |    | D. Menu       |
|    | OPT2      |    | Format        |
|    | Coax/CD   |    | Yellow        |
|    | Analog1   |    | Red           |
|    | Analog2   |    | Green         |
|    | iPod/USB  |    | Blue          |
|    | USB-DAC   |    | 3D            |
|    | I<<       |    | I<<           |
|   | Play      |   | Play          |
|  | Pause     |    | Pause         |
|  | >>I       |    | >>I           |
|  | Stop      |    | Stop          |
|  | Random    |    | Media         |
|  | Repeat    |    | Text          |
|  | Mode      |    | Subt          |

**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |         |
|---|--------|---|---------|
|    | Info   |    | Info    |
|    | Dimmer |    | Smart   |
|    | Vol+   |    | Vol +   |
|    | Vol-   |    | Vol -   |
|    | Mute   |    | Mute    |
|    | Up     |    | Up      |
|    | Down   |    | Down    |
|    | Right  |    | Right   |
|    | Left   |    | Left    |
|    | Enter  |    | Ok      |
|   | Back   |   | Back    |
|  | Setup  |  | Options |
|  | 1      |  | 1       |
|  | 2      |  | 2       |
|  | 3      |  | 3       |
|  | 4      |  | 4       |
|  | 5      |  | 5       |





**Originalfernbedienung Ersatzfernbedienung**

|            |            |             |       |
|------------|------------|-------------|-------|
| 6          | 6          | 6           | 6     |
| 7          | 7          | 7           | 7     |
| 8          | 8          | 8           | 8     |
| 9          | 9          | 9           | 9     |
| 0          | 0          | 0           | 0     |
| +10        | +10        | GUIDE       | Guide |
| CLEAR      | Clear      | EXIT        | Exit  |
| PROGRAM    | Program    | PROG SLEEP  | Sleep |
| TIME       | Time       | TIMER AV    | AV    |
| Q.REPLAY   | Q.Replay   | SOUND DUAL  | Dual  |
| REPEAT A-B | A-B Repeat | SEARCH TV/R | TV/R  |
|            |            |             |       |
|            |            |             |       |
|            |            |             |       |
|            |            |             |       |
|            |            |             |       |
|            |            |             |       |
|            |            |             |       |
|            |            |             |       |
|            |            |             |       |
|            |            |             |       |

**Originalfernbedienung Ersatzfernbedienung**

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

