 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eco		3D
	CH/Page+		Ch +
	CH/Page-		Ch -
	Sleep		Sleep
	Mute		Mute
	Volume+		Vol +
	Volume-		Vol -
	Info		Info
	Option		Options
	Setup		Menu
	Back		Back
	Up		Up
	Enter		Ok
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	Stop		Stop
	Home		Smart
	>>I/Tune+		>>I
	I<</Tune-		I<<
	>>		>>
	<<		<<
	Green/Movie		Green
	Red/Music		Red
	Blue/Game		Blue
	Yellow/Pure		Yellow
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
1	Smart Select 1	REPEAT TEXT	Text
2	Smart Select 2	TIMER AV	AV
3	Smart Select 3	PICTURE FORMAT	Format
TV AUDIO	TV Audio	SEARCH TV/R	TV/R
4	Smart Select 4	E-MANUAL D.MENU	D. Menu
CBL/SAT	CBL/SAT	SHIFT + 1	Shift + 1
DVD	DVD	SHIFT + 2	Shift + 2
Blu-ray	Blu-ray	SHIFT + 3	Shift + 3
AUX1	AUX1	SHIFT + 4	Shift + 4
TUNER	Tuner	SHIFT + 5	Shift + 5
Bluetooth	Bluetooth	SHIFT + 6	Shift + 6
GAME	Game	SHIFT + 7	Shift + 7

Originalfernbedienung Ersatzfernbedienung

PHONO	Phono	SHIFT + 9	Shift + 9
AUX2	AUX2	SHIFT + 8	Shift + 8
iPod / USB	iPod / USB	GUIDE	Guide
Internet Radio	Internet Radio	PRE-CH	Pre Ch
Media Player	Media Player	SHIFT + GUIDE	Shift + Guide
CD	CD	SHIFT + 0	Shift + 0
Online Music	Online Music	SHIFT + PRE-CH	Shift + Pre Ch

 



 



 











 




 
 



 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CH/Page+		Ch +
	CH/Page-		Ch -
	Sleep		Sleep
	Mute		Mute
	Volume+		Vol +
	Volume-		Vol -
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Home		Smart
	Stop		Stop
	Pause		Pause
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	<<		<<
	>> /Tune+		>>
	<</Tune-		<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Smart Select 1		Text
	Smart Select 2		AV
	Smart Select 3		Format





Originalfernbedienung Ersatzfernbedienung

	Smart Select 4		3D
	TV Audio		TV/R
	Media Player		Shift + Guide
	Internet Radio		Pre Ch
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Blu-ray		Shift + 3
	AUX1		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	AUX2		Shift + 8
	Phono		Shift + 9
	iPod / USB		Guide
	CD		Shift + 0
	Online Music		Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung

 



 
 


 
 
 

 
 
 

 

 
 
 

 
 
 
 
 

 

 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	CH/Page+		Ch +
	CH/Page-		Ch -
	Sleep		Sleep
	Mute		Mute
	Volume+		Vol +
	Volume-		Vol -
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Home		Smart
	Stop		Stop
	Pause		Pause
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	>> /Tune+		>>
	<</Tune-		<<
	<<		<<
	>>		>>
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Smart Select 1		Text
	Smart Select 2		AV
	Smart Select 3		Format





Originalfernbedienung Ersatzfernbedienung

Smart Select 4	ECO 3D	3D
TV Audio	SEARCH TV/R	TV/R
Media Player	SHIFT + GUIDE	Shift + Guide
Internet Radio	FAV PRE-CH	Pre Ch
CBL/SAT	SHIFT + 1	Shift + 1
DVD	SHIFT + 2	Shift + 2
Blu-ray	SHIFT + 3	Shift + 3
AUX1	SHIFT + 4	Shift + 4
Tuner	SHIFT + 5	Shift + 5
Bluetooth	SHIFT + 6	Shift + 6
Game	SHIFT + 7	Shift + 7
AUX2	SHIFT + 8	Shift + 8
Phono	SHIFT + 9	Shift + 9
iPod / USB	GUIDE	Guide
CD	SHIFT + 0	Shift + 0
Online Music	SHIFT + FAV PRE-CH	Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung

