





 

 




 

 



 





 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	TV Audio		7
	AUX2		8
	Tuner		9
	USB		Guide
	CD		0
	Bluetooth		Pre Ch
	Phono		Shift + Smart
	Internet Radio		Media







 


 







 

 



 







 

Originalfernbedienung Ersatzfernbedienung

	CH / Page Up		Ch +
	CH / Page Down		Ch -
	Eco		3D
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Info		Info
	Option		Options
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Back		Back
	Setup		Menu
	I<</Tune-		I<<
	Play		Play







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	CBL/SAT		1
	DVD		2
	Blu-ray		3
	Game		4
	AUX1		5
	Media Player		6
	Tv Audio		7
	AUX2		8
	Tuner		9
	USB		Guide
	CD		0
	Bluetooth		Pre Ch
	Phono		Smart
	Internet Radio		Shift + Smart
			Media

Originalfernbedienung Ersatzfernbedienung

	CH / Page Up		Ch +
	CH / Page Down		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Back		Back
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	>>/Tune+		>>I
	Smart Select 1		Shift + 1
	Smart Select 2		Shift + 2



