 
 
 
 
 










Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Sleep		Sleep / Timer
	Clock		Shift + Sleep / Timer
	Power		Power
	Internet Radio		Display / Media
	USB		Shift + 8
	Music Servers		Audio / Lang I/II
	Tuner		Shift + 6
	Analog In		AV / Input / RDS
	Optical In		D.Menu / Top
	CD		Shift + 3
	Bluetooth		Shift + 9
	I<</CH-		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I/CH+		>>I / Preset+
	Speaker A/B		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Volume A/B		Red / Netflix / Search
	ADD Favorites		CH+ / Page+
	DBB/Tone		Subtitle / EQ
	Volume+		Vol+
	Call Favorites		CH- / Page-
	Mute		Mute / Dimmer
	Volume-		Vol-
	Queue		Smart / List
	Up/Tune+		Up
	Option/Program		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Back		Back / Return
	Down/Tune-		Down
	Setup		Menu / Home





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
1	1	TV	1				
2	2	DVD	2				
3	3	CD - STB	3				
4	4	VIDEO	4				
5	5	TAPE	5				
6	6	TUNER	6				
7	7	AUX - HDD	7				
8	8	USB	8				
9	9	BLUETOOTH	9				
+10	+10	GUIDE EPG	Guide / EPG / -/--				
0	0	HDMI - BAT	0				
CLEAR	Clear	EXIT	Exit / Cancel / Clear				
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random				
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat				
DIMMER	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer				
INFO	Info	ANGLE INFO	Info / Angle				

