


 





 
 



 























Originalfernbedienung Ersatzfernbedienung

	Standby		Shift + Power
	On		Power
	A/D		Audio / Lang I/II
	ATT		TV/Radio /
	SPK-AB		Red / Netflix / Search
	7.1		Green / APP / Repeat
	BD		8
	DVD		2
	VCR		4
	DSS		5
	TV		1
	CD		3
	CDR		9
	AUX		7
	TUNE		6
	Input Up		CH+ / Page+
	Setup		Setup / OPT /

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	Volume+		Vol+
	Input Down		CH- / Page-
	Display		Display / Media
	Surr		Eject / Surround
	Volume-		Vol-
	Top		D.Menu / Top
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Auto		Smart / List
	Stereo		Sound / Title





Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	EQ		Subtitle / EQ
	LIP Sync		Picture / Format
	Night		Zoom / Size
	T.Tone		Text / Goto
	CH Sel		AV / Input / RDS
	Treble-		I<< / Preset-
	Treble+		>>I / Preset+
	CH-		Shift + CH- /
	Bass-		<< / Tune-
	CH+		Shift + CH+ /
	Bass+		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

