



 








 


 
 
 



 
 




 









Originalfernbedienung Ersatzfernbedienung

	Standby		Shift + Power
	On		Power
	HDMI		Shift + 0
	Zone A		Sound / Title
	Zone B		Audio / Lang I/II
	A/D		Red / Netflix / Search
	ATT		Green / APP / Repeat
	SPKR A-B		Yellow / YouTube / Repeat
	7.1		Blue / Prime Video / Random
	BD		Shift + 5
	DVD		Shift + 2
	VCR		Shift + 4
	DSS		Shift + 9
	TV		Shift + 1
	CD		Shift + 3
	CDR		Shift + Fav / Marker / PC
	AUX		Shift + 7


Originalfernbedienung Ersatzfernbedienung

	Tune		Shift + 6
	USB		Shift + 8
	M-XP		Shift + Guide / EPG / -/--
	Input Up		CH+ / Page+
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Input Down		CH- / Page-
	Display		Display / Media
	Surr		Eject / Surround
	Volume-		Vol-
	Top		Smart / List
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	HT EQ		Guide / EPG / -/--
	Auto		1
	Stereo		2
	P.Direct		3
	Sleep		Sleep / Timer
	Sleep		4
	M-Dax		5
	EQ		6
	EQ		Subtitle / EQ
	LIP Sync		7
	Night		8
	T.Tone		Text / Goto
	CH Sel		0
	V-Off		9





Originalfernbedienung Ersatzfernbedienung

	Treble-		I<< / Preset-
	Treble+		>>I / Preset+
	CH-		Shift + CH- /
	Bass-		<< / Tune-
	CH+		Shift + CH+ /
	Bass+		>> / Tune+

 

 

 

 

 



 

 

 

 

 



 

 

 



 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Memo		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	>>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8
	9		9
	CLR		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/-





Originalfernbedienung Ersatzfernbedienung

 
	CH-		CH- / Page-
	CH+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

 

 







 

 





 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Volume-		Vol-
	Tune+		>> / Tune+
	Info		Info / Angle
	Preset-		I<< / Preset-
	Enter		OK
	Preset+		>>I / Preset+
	Menu		Menu / Home
	Tune-		<< / Tune-
	Memo		Smart / List
	T.Mode		Text / Goto
	P.Scan		D.Menu / Top
	Band		Setup / OPT /
	1		1

Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CLR		Exit / Cancel / Clear
	0		0
	CAT-		CH- / Page-
	CAT+		CH+ / Page+

